## **Products Needed**



### **Tools Needed**

No Tools Required

#### Frequency

Monthly

### **Special Directions**

Procedure assumes air freshener base unit is already installed on door, wall or other fixture

# **Replace Cover and Battery**



Remove air freshener scented cover and battery after 30 days of use to properly maintain.

 
NOTE: Pushing UP on bottom tab may help to loosen cover so it can be removed more easily.



Insert new alkaline "C" battery.



Push UP on bottom mounting tab to reset the 30 day cycle. Fan will turn and lights will blink green confirming reset.



Hang new scented cover on the top mounting tab first. Then fit over the bottom mounting tab.

LED light will blink green, indicating unit is operating properly.

#### LED Light Signal:

- Blinking Green = **Program Running**
- Blinking Red = Change Cover and Battery Immediately.
- No LEDs Blinking = Change Battery and Cover.
- Audible Alert = Overdue; Change Cover and Battery Immediately.



©2021 Procter & Gamble. All Rights Reserved. Unauthorized reproduction prohibited. (Last Updated: 05/03/2021) Region: United States/Canada