

P&G PRO LINE FLOOR FINISH APPLICATION – Conventional Mop/Bucket

Tools Needed

- Wet Floor Sign
- Mop Bucket & Wringer
- Plastic Liner (clear or white)
- Clean, Dry Rayon Mop
- Fan (poor ventilation areas only)



Product Needed

Any P&G Pro Line Floor Finish



WHEN TO APPLY FINISH: Apply floor finish following deep scrub & recoat or stripping operations.

PREPARATION: Collect all tools, equipment and products required. Ensure all equipment is operational. Review MSDS, product labels and caution statements. Choose appropriate safety equipment.

SPECIAL DIRECTIONS FOR THIS TASK: Before applying finish, make sure the floor surface is properly prepared. If floor has been stripped, all residual stripper must be removed. A Sealer application is not generally recommended, except for porous or damaged floors (cracked, chipped, heavily worn, etc), an initial coat of floor sealer is recommended. Sealer is generally recommended on “non standard” floors (see “Non Standard Floor Procedure Sheet”). Floor must be completely dry and tack free before performing this procedure. Start with clean, dry rayon mop. When finished, clean and return equipment to storage area. Remove wet floor sign only when finish is dry.




STEP 1

- Put out wet floor sign in area to be mopped.



STEP 2


- Line mop bucket with plastic liner (clear or white).
- Pour floor finish into mop bucket.

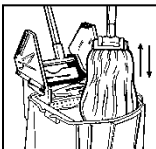

STEP 3

- Fully coat mop in finish.


NOTE: Start with clean, dry rayon mop.

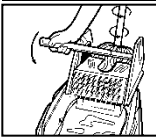

STEP 4


- Twist lower portion of mop in wringer and wring out finish.

NOTE: Top portion of mop will feed mop right amount of finish for a moderately thin, uniform coat.

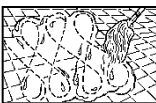

STEP 5

- Starting at farthest point from door, picture frame a 10 ft. by 10 ft. area with mop.
- Mop inside frame using an even back-and-forth motion.
- Repeat Step 3 through Step 4 to replenish finish when mop head begins to drag on floor.

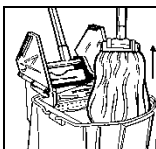

STEP 6


- Move to next 10 ft. by 10 ft. area, working towards doorway and repeat Step 3 through Step 6.



STEP 7

- Allow 30 – 45 minutes for floor to dry before applying additional coats. Drying may take longer if high humidity, cool temperatures, or low air flow.
- Floor should be tack free for 10 minutes before applying additional coats.


NOTE: For thorough drying in poor ventilation areas, dry times may be longer. A fan may be used after floor loses wet appearance (10 – 20 minutes). Direct air movement up toward ceiling or out from room. Caution: Do not point fan at a dusty/dirty ceiling. Do not point fan directly on the drying finish.

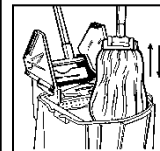

STEP 8

- Repeat Step 3 through Step 8 for additional coats.

NOTE: For Deep Scrub & Recoat application, apply 2 – 3 coats. If floor has been stripped, apply a max of 4 coats to allow proper curing.

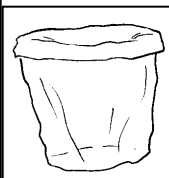

STEP 9

- When entire area is complete, remove liner from bucket, twist, tie and discard.

NOTE: Do not pour remaining contaminated finish back into product container.

DAY-TO-DAY MAINTENANCE




STEP 1

- Dust mop area as need following the Dust Mop Procedure.



STEP 2

- Wet clean area as needed using any of the following wet cleaning procedures: Damp Mop, Disinfecting Damp Mop or Automatic Scrubber Floor Cleaning. For accumulated soil, lightly scrub as required.

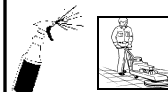

STEP 3

- To repair finish, spray buff using proper pad following the Spray Buff Procedure.